

# Exhibit 4

## NDOT Mowing Details & Safety




### Mowing Requirements


Right of Way mowing is necessary for NDOT to meet its objectives for traveler safety and for controlling problem vegetation. Right of way mowing is defined as machine rotary mowing of vegetation along the highway.


### Mowing Details

All areas around, under and in front of guardrails are to be mowed clear of vegetation.

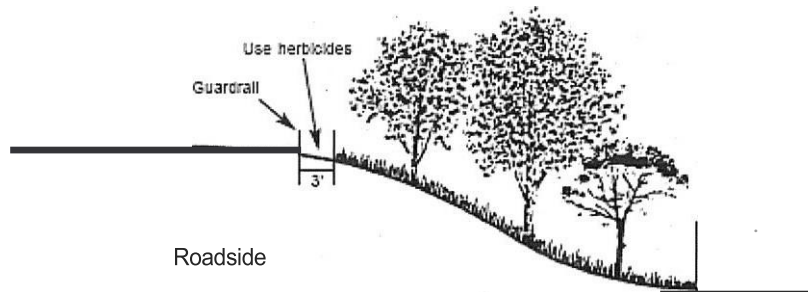


### Snow control mowing

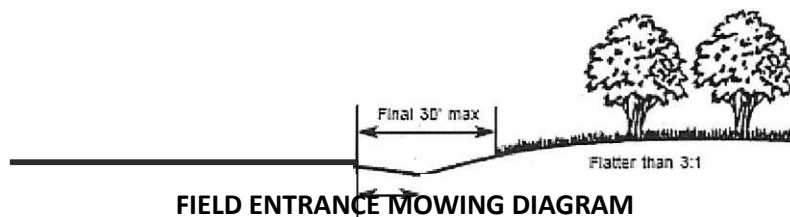


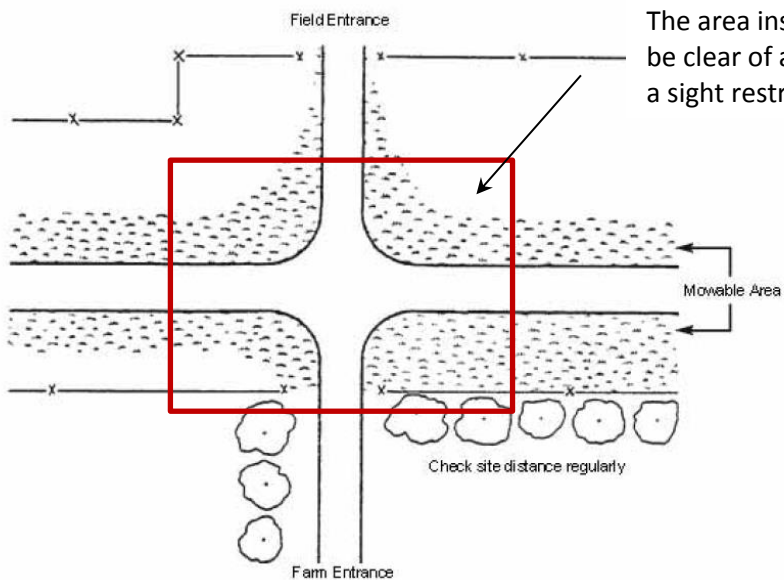

**COUNTY ROAD INTERSECTION MOWING DIAGRAM**

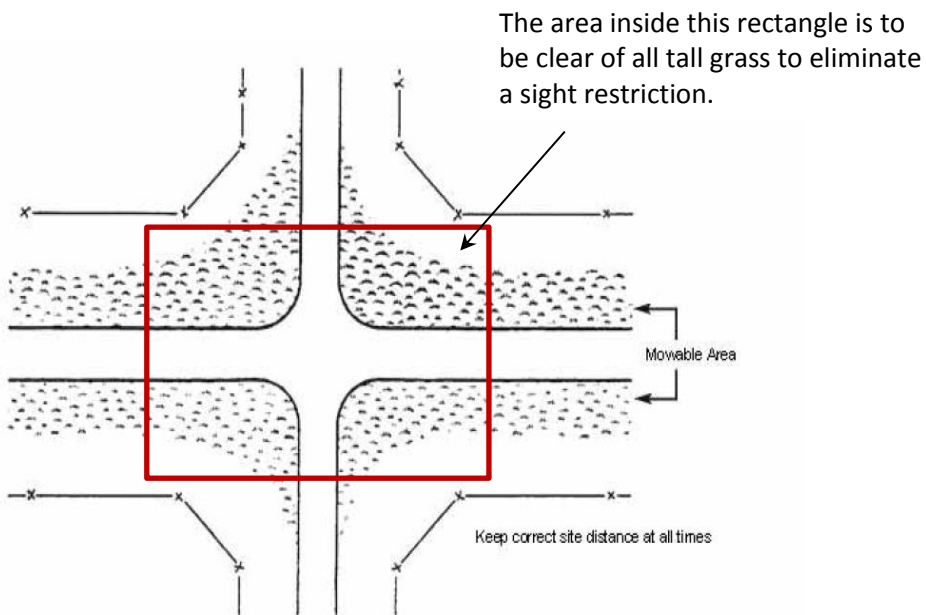

**HIGHWAY INTERSECTION MOWING DIAGRAM**

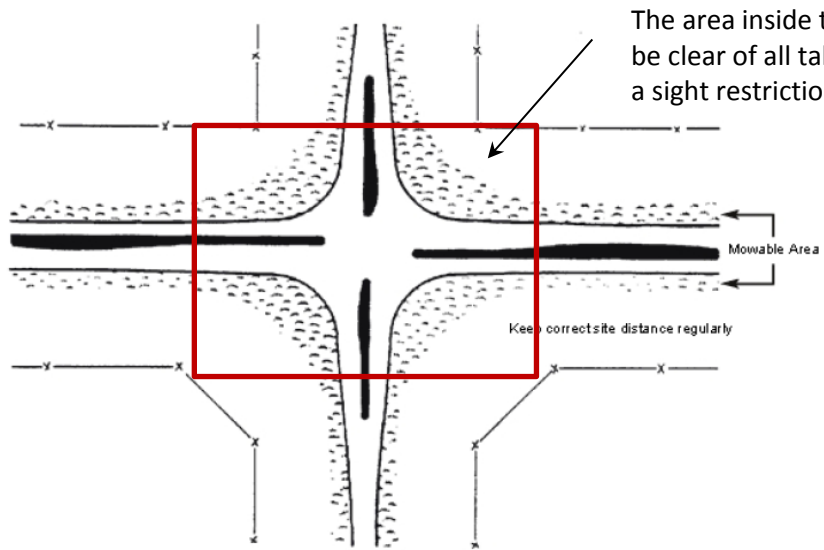


The area inside this rectangle is to be clear of all tall grass to eliminate a sight restriction.

Mowable Area

Keep correct site distance regularly

# Typical Installation of Marker Posts

The following roadway indicates typical placement of marker posts. Care shall be exercised in marker post placement to avoid damage to culvert pipe headwalls, parapet walls, etc.

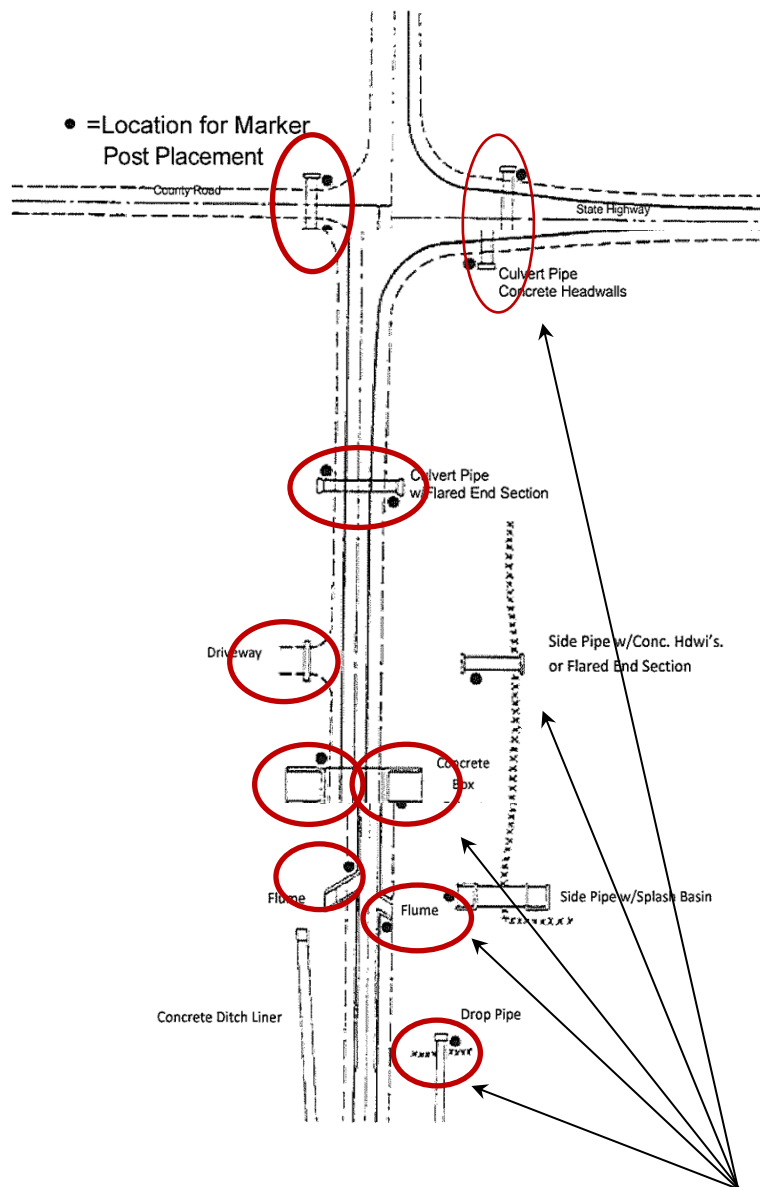

- I. The area around the delineators, object markers and obstacle is to be clear from all tall grass as identified with a red oval if it is in the area that is machine mowed.