

Exhibit 4

NDOT Mowing Details & Safety




Mowing Requirements


Right of Way mowing is necessary for NDOT to meet its objectives for traveler safety and for controlling problem vegetation. Right of way mowing is defined as machine rotary mowing of vegetation along the highway and trimming is defined as mowing/cutting of vegetation around obstructions such as guardrail posts, light poles, delineator's, culvert ends and sign bases. Acceptable equipment for hand mowing are: smaller mowers, weed eaters, string trimmers, push mowers or by hand scythes.

Mowing Details


All areas around, under and in front of guardrails are to be mowed clear of vegetation.

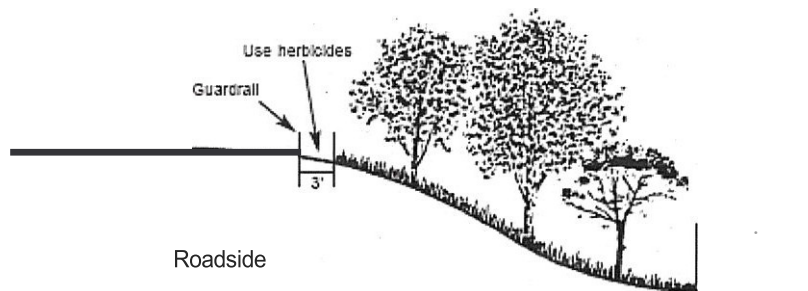


Snow control mowing

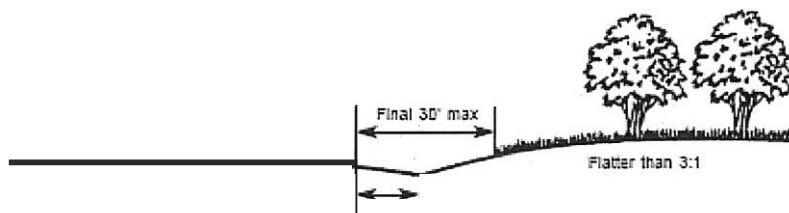


FIELD ENTRANCE MOWING DIAGRAM

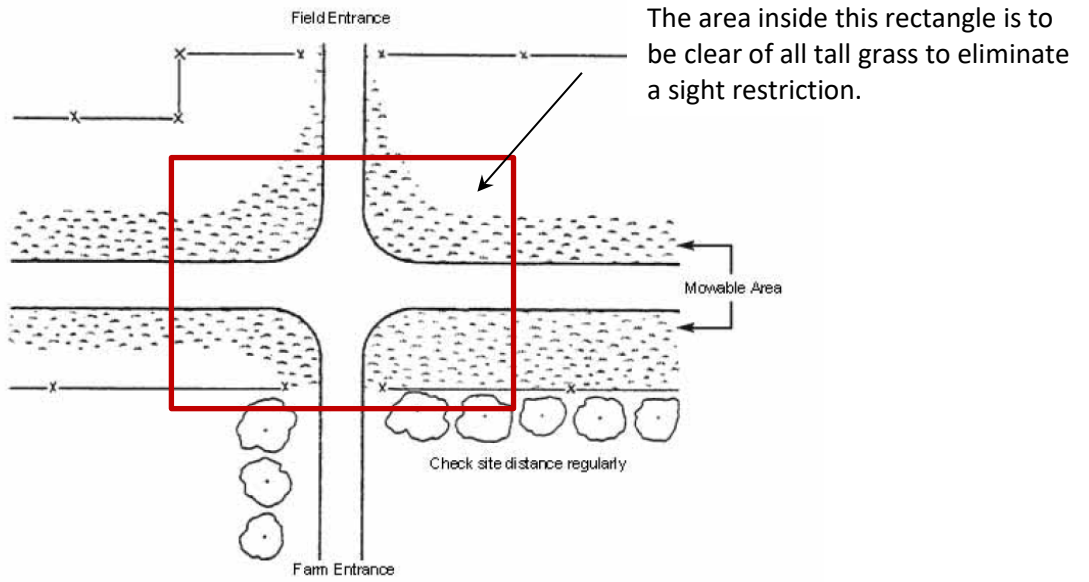

COUNTY ROAD INTERSECTION MOWING DIAGRAM

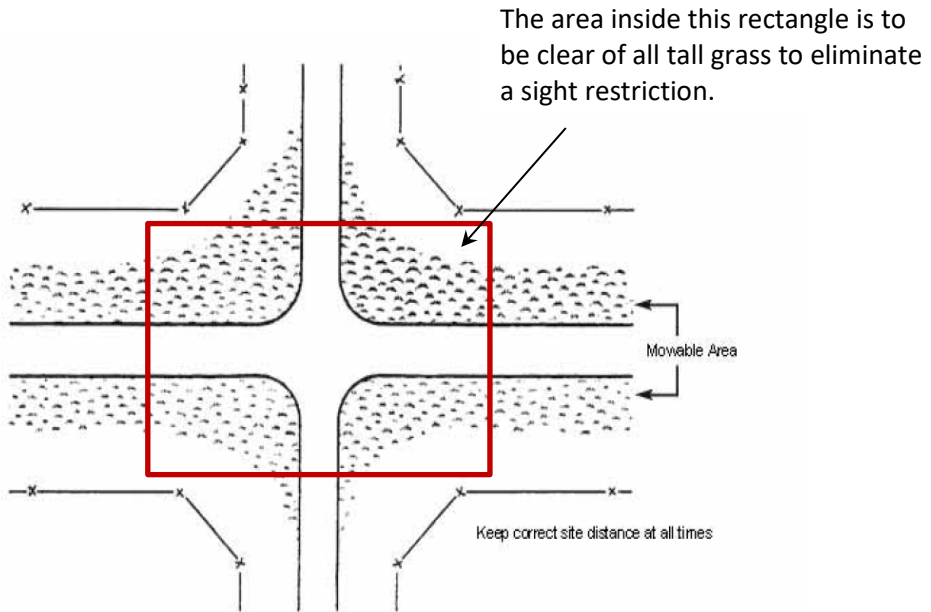


HIGHWAY INTERSECTION MOWING DIAGRAM

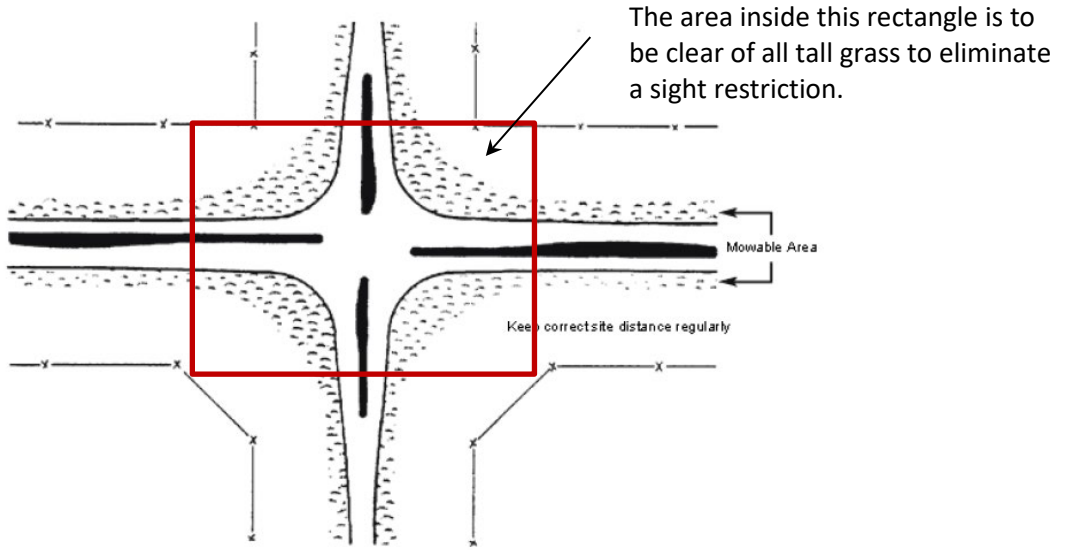

Typical Installation of Marker Posts

The following roadway indicates typical placement of marker posts. Care shall be exercised in marker post placement to avoid damage to culvert pipe headwalls, parapet walls, etc.

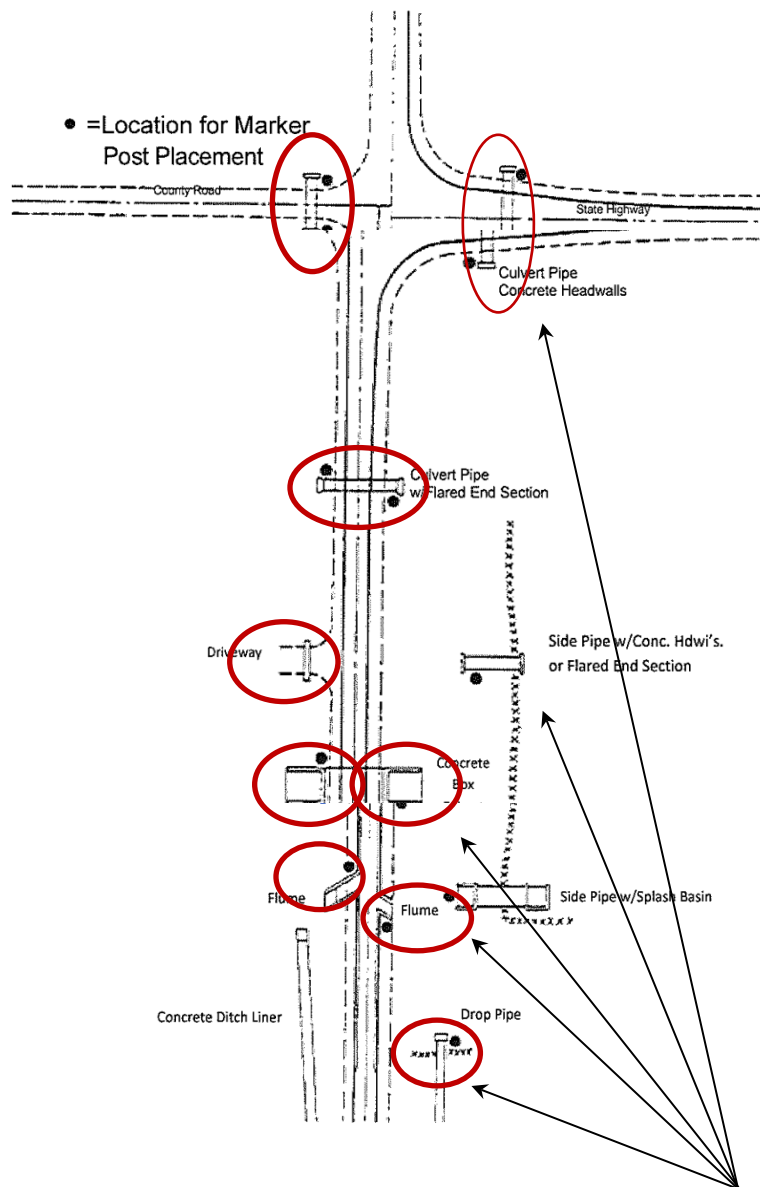

- I. The area around the delineators, object markers and obstacle is to be clear from all tall grass as identified with a red oval if it is in the area that is machine mowed.